

## ASSEMBLING INSTRUCTION


### NUMBER PLATE

**KR9400-18**

[WWW.BARRACUDAMOTO.COM](http://WWW.BARRACUDAMOTO.COM)

### LEGEND

- |  |   |  |
|--|---|--|
| <p><b>1.</b> BRACKET A<br/>STAFFA A<br/>SOPORTE A<br/>HALTERUNG A<br/>SUPPORT A</p> <p><b>2.</b> ALLEN SCREW M8X25<br/>VITE A BRUGOLA M8X25<br/>TORNILLO ALLEN M8X25<br/>INBUSSCHRAUBE M8X25<br/>VIS ALLEN M8X25</p> <p><b>3.</b> BRACKET B<br/>STAFFA B<br/>SOPORTE B<br/>HALTERUNG B<br/>SUPPORT B</p> | <p><b>4.</b> ALLEN SCREW M8X16<br/>VITE A BRUGOLA M8X16<br/>TORNILLO ALLEN M8X16<br/>INBUSSCHRAUBE M8X16<br/>VIS ALLEN M8X16</p> <p><b>5.</b> NUMBER PLATE<br/>TABELLA PORTANUMERO<br/>SOPORTE PORTANUMERO<br/>NUMMERNTAFEL<br/>SUPPORT NUMERO</p> <p><b>6.</b> COUNTERSUNK ALLEN M8X16<br/>VITE A TESTA SVASATA M8X16<br/>TORNILLO AVELLANADO M8X16<br/>COUNTERSUNK-SCHRAUBE M8X16<br/>VIS FRAISEE M8X16</p> | <p><b>7.</b> SELF-LOCKING NUT Ø8<br/>DADO AUTOBLOCCANTE Ø8<br/>TUERCA AUTOBLOCANTE Ø8<br/>SELBSTSICHERNDE MUTTER Ø8<br/>ÉCROU AUTOBLOQUANT Ø8</p> <p><b>8.</b> NEOPRENE 20X20 mm<br/>NEOPRENE 20X20 mm<br/>NEOPRENO 20X20 mm<br/>NEOPREN 20X20 mm<br/>NÉOPRÈNE 20X20 mm</p> <p><b>9.</b> THICKNESSES<br/>SPESORE<br/>ESPACIADOR<br/>ABSTANDSHALTER<br/>SPACEUR</p> |
|--|---|--|

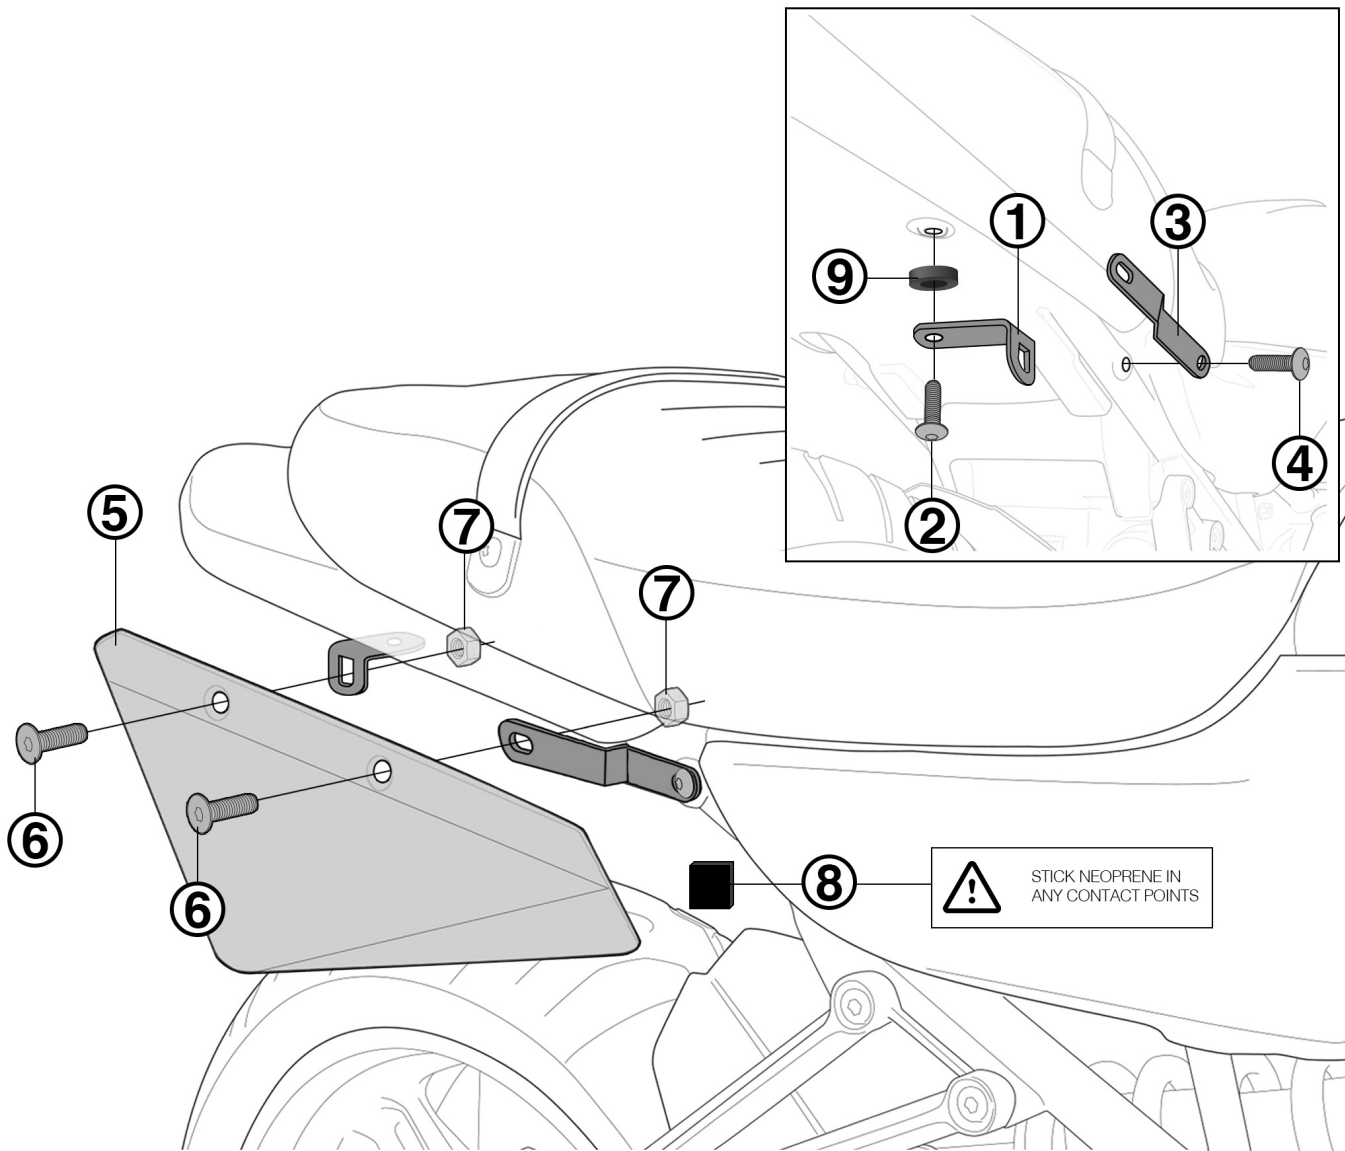

**EN:** ATTACH THE STICKER AFTER TIGHTENING THE BRACKET SCREWS

**IT:** ATTACCARE L'ADESIVO DOPO AVER STRETTO LE BRUGOLE DELLA STAFFA

**ES:** APLICAR EL ADHESIVO DESPUÉS DE APRETAR LOS TORNILLOS DEL SOPORTE

**DE:** TRAGEN SIE DEN KLEBER NACH DEM ANZIEHEN DER BEFESTIGUNGSSCHRAUBEN AUF

**FR:** APPLIQUER L'ADHÉSIF APRÈS AVOIR SERRÉ LES VIS DU SUPPORT

**BARRACUDA**

Cod.: HX7400-21  
Descr.: SIDE STICKER

**1. Clean**

Clean the area with rubbing alcohol or soap and water.

**2. Align**

Align the sticker to the location.

**3. Apply**

Apply decal starting from the top edge. Use your fingers to push and smooth the decal into the application area.

**4. Heat**

Warm the decal with a heat gun or hair dryer to activate the adhesive.

**APPLYING YOUR DECAL**